


ET90000 Double Pole Relay Upgrade

Now Standard on 4, 8, 12 & 16 Circuit Models

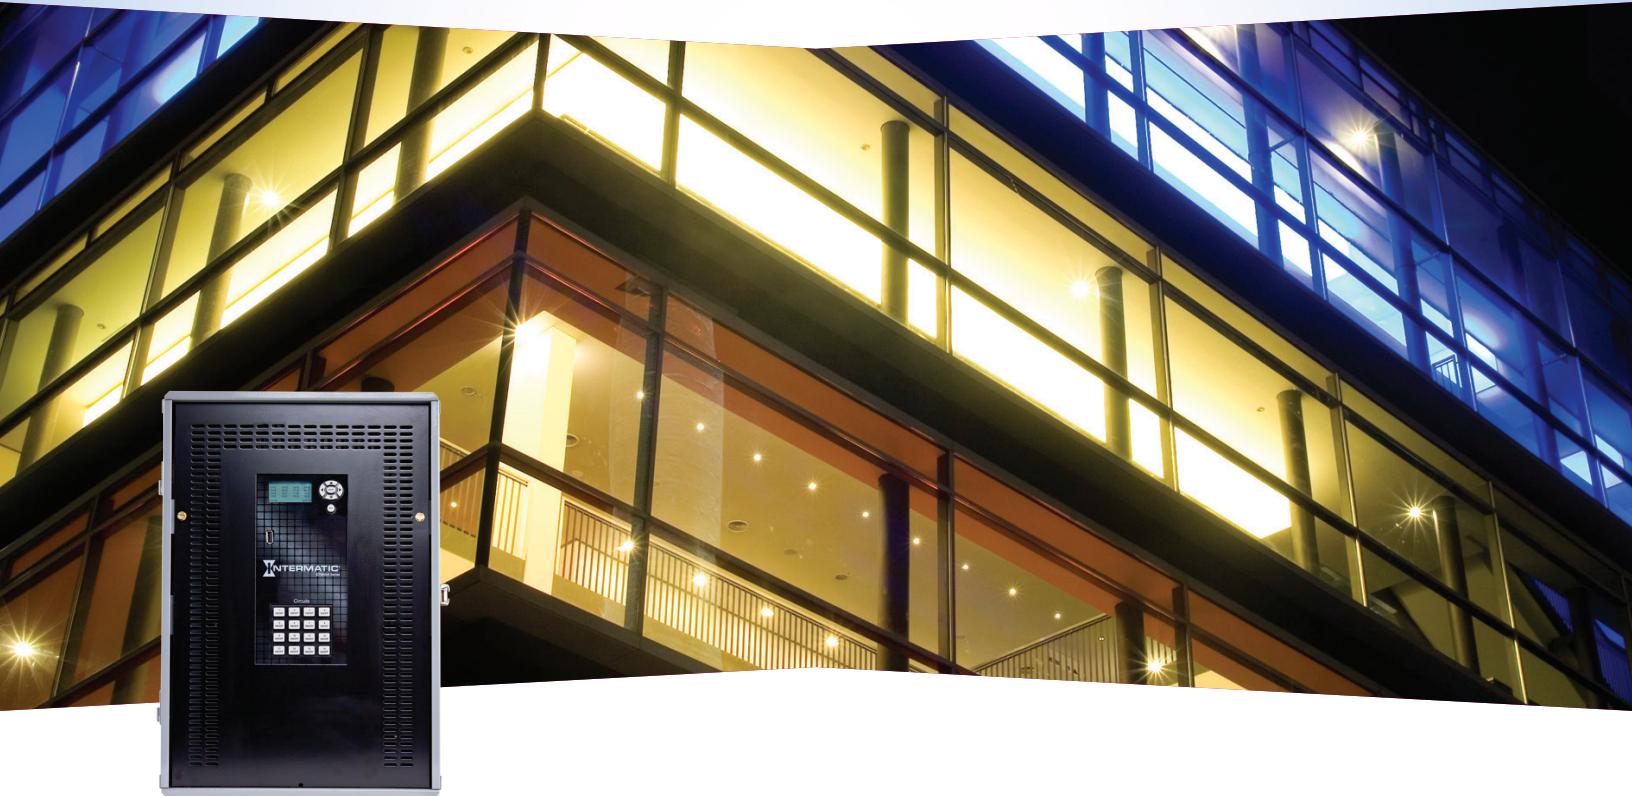

Update on ET90000 Series (4 Circuits and Above)

 
Now your controls can be configured to work as Double Pole relays for enhanced flexibility and peace of mind. If you currently use the ET90000 PC App, be sure to download the latest version of the PC App which has been optimized to support Double Pole configurations from Intermatic.com!

Configuration options that will now be available are as follows:


(New options in blue)

- 4xSPST
- 4xSPDT
- 2xDPST
- 2xDPDT
- 1xDPST and 2xSPST
- 1xDPST and 2xSPDT
- 1xDPDT and 2xSPST
- 1xDPDT and 2xSPDT

Jumper Pin Configurations




 Jumper connecting pins 1 and 2 provide Double Pole (DPDT/DPST)



Jumper connecting pins 2 and 3 provide Single Pole (SPDT/SPST)

Jumper Pin Locations

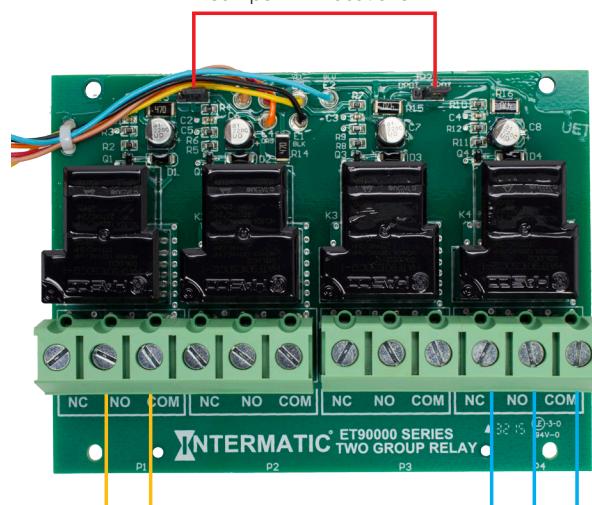

Using only the NO and COM Terminals provide **ST** (Single Throw)

Using only the NO, NC and COM Terminals provide **DT** (Double Throw)